
GRILLE TALK · Magnetic plate mount


Quick install guide. About 10 minutes, then let the tape set for 24 hours.

A

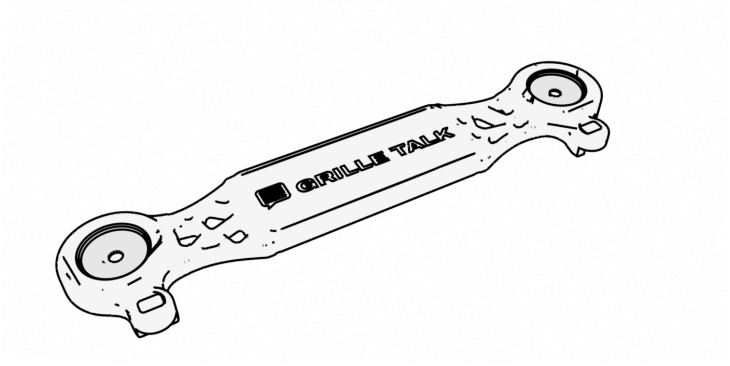

×1

B

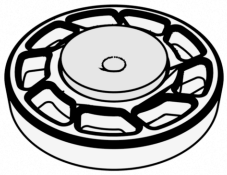


×2

C



×2

D

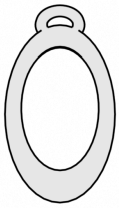

×4


No tools. You need: rubbing alcohol + a cloth. Fit between 60 and 100 °F.

Good to know

Pucks need a flat spot on the plate: no raised letters or edges under them. Wipe grit off the magnets before snapping the plate back on. Strong magnets: keep loose pucks away from phones, cards and pacemakers. Some states require plates to be screwed on; check yours.

1


alcohol · 60–100 °F

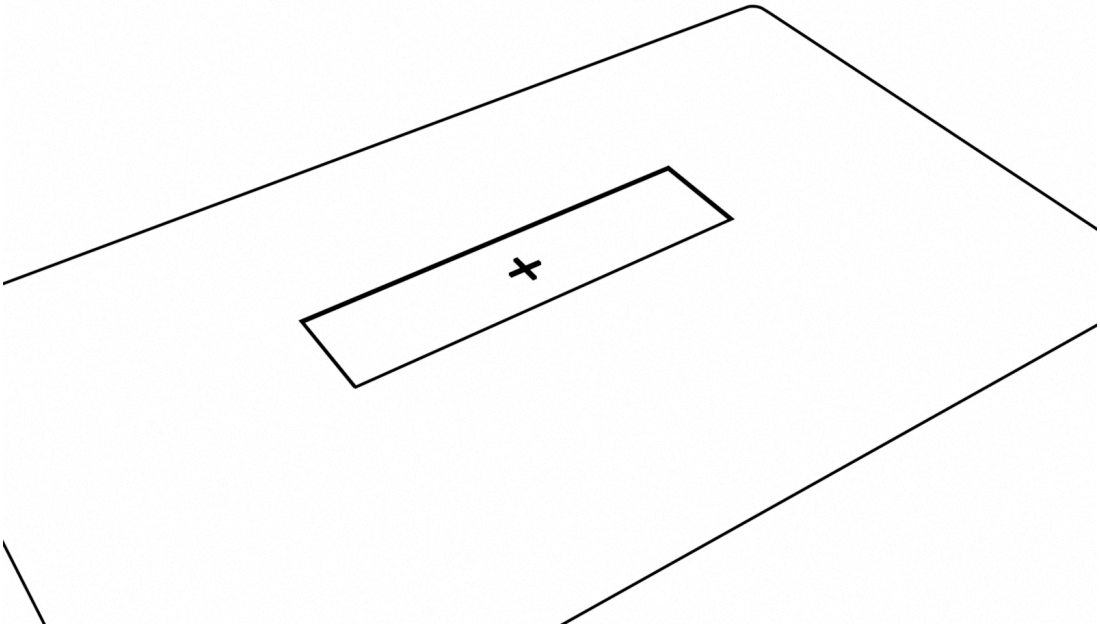

Clean the middle of where the plate goes. Let it dry.

2


A · peel · 30 s

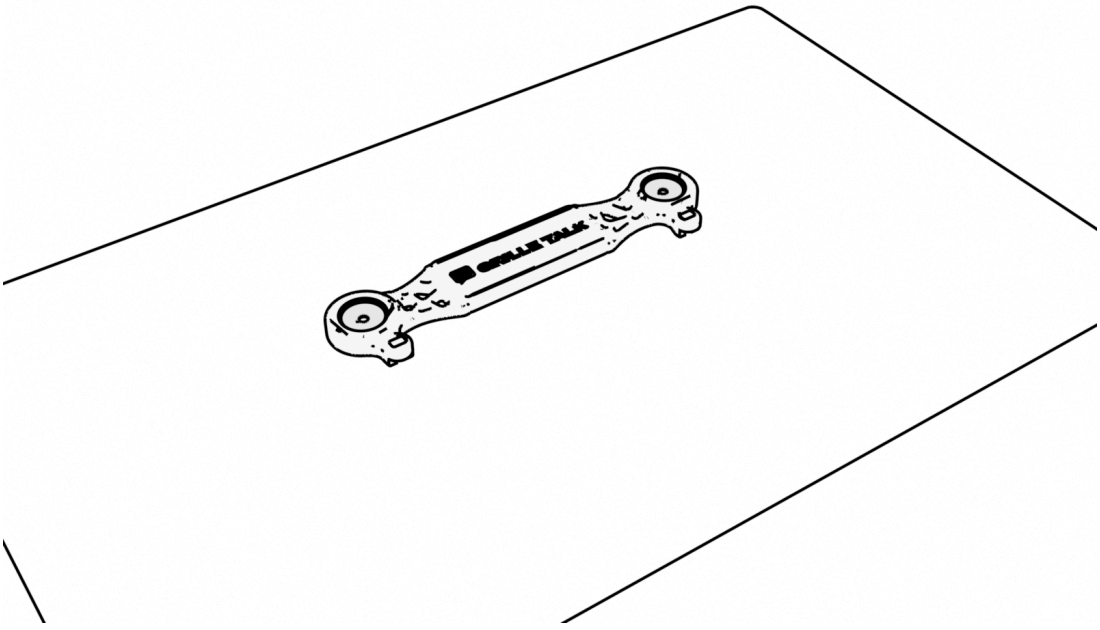

Peel the red liners. Logo out, level, centred. Press hard.

3


B ×2 · peel

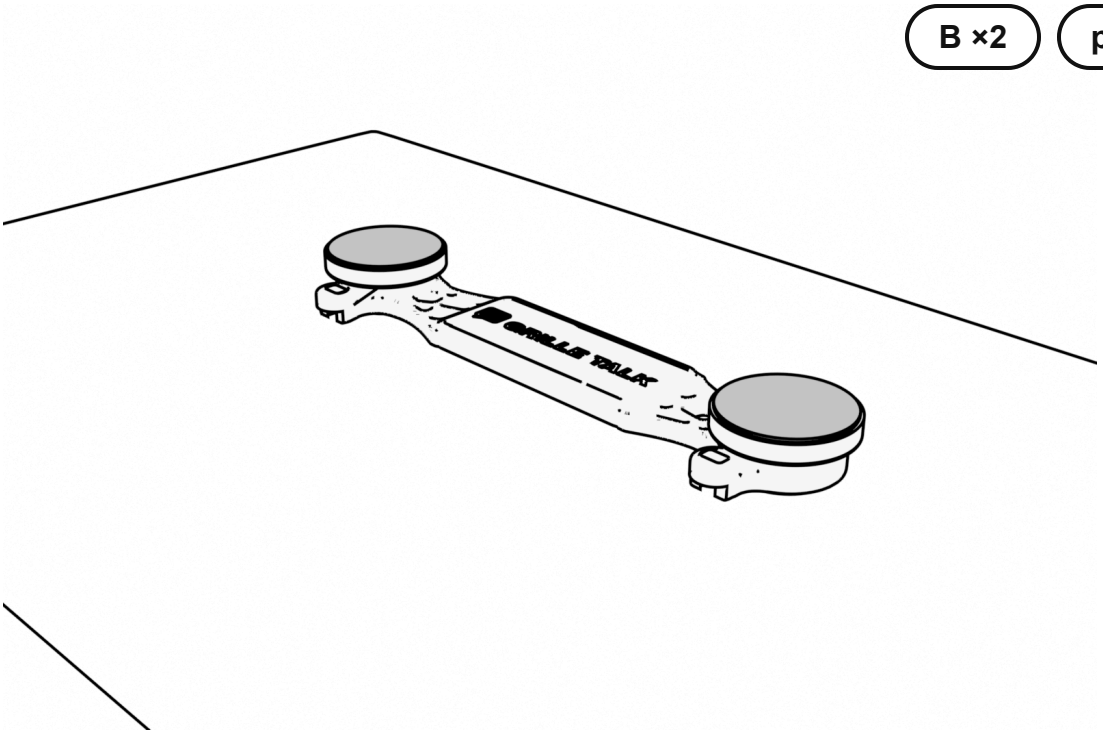

Snap both pucks into the cups. Peel their liners.

4


30 s

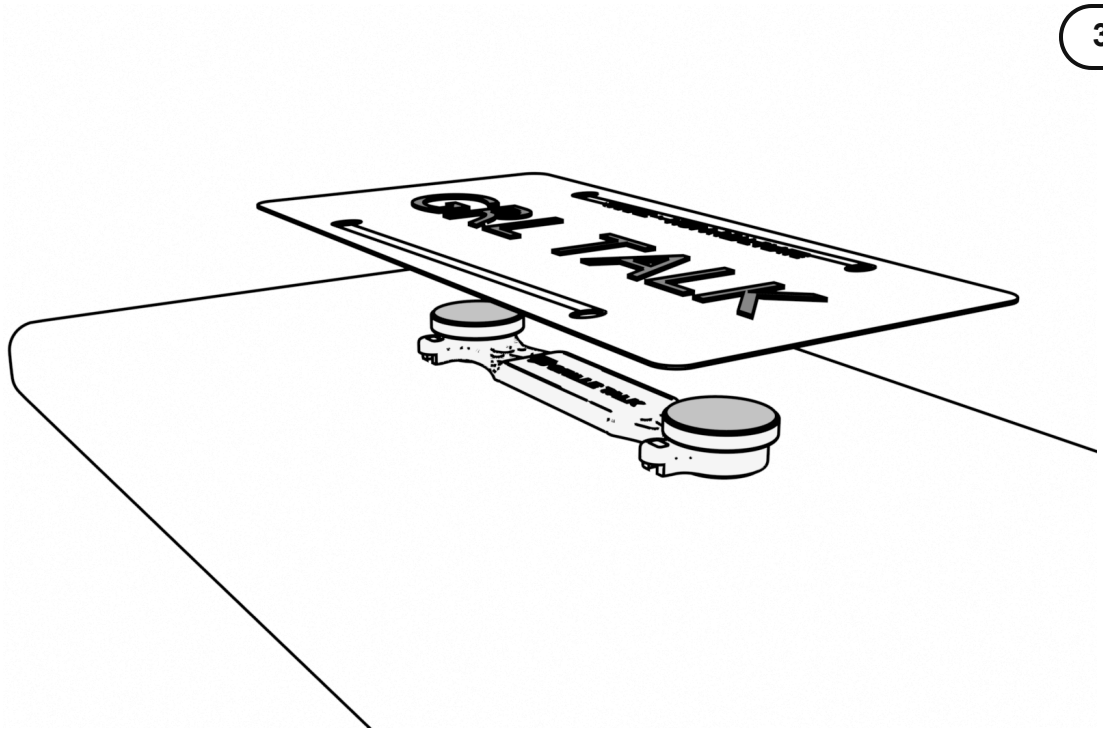

Press the plate onto the pucks. Pull it straight off: the pucks stay on the plate.

5

24 h

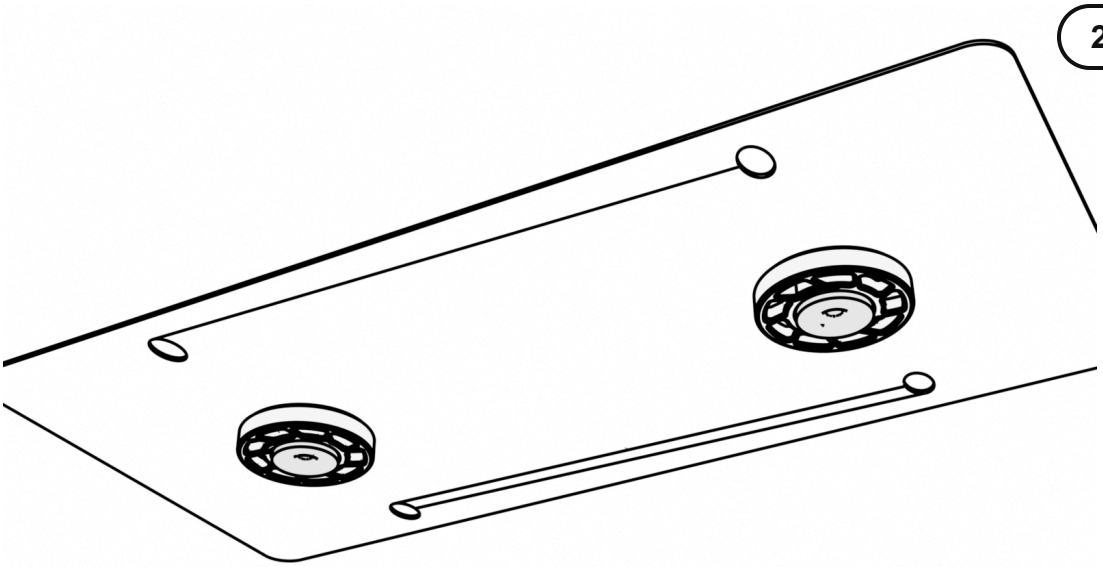


Press each puck again. Wait 24 h before driving, 72 h before a car wash.

6

C ×2


D ×4

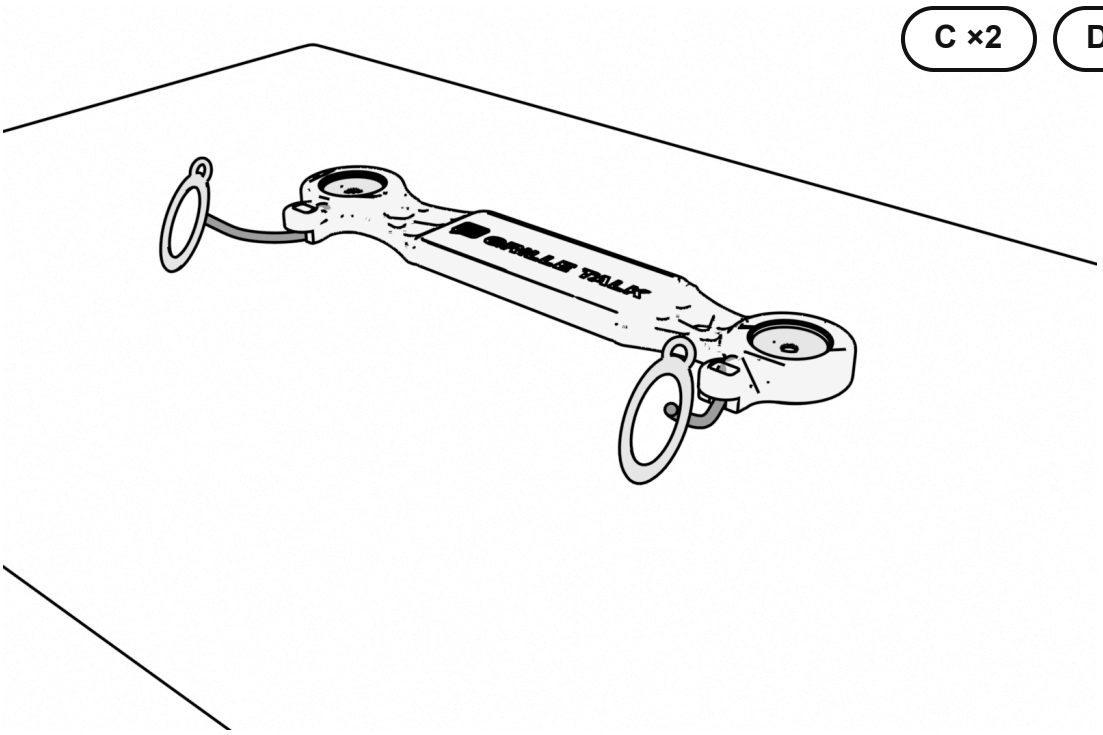

One tether each side: bracket loop to the plate’s lower hole.

7

click

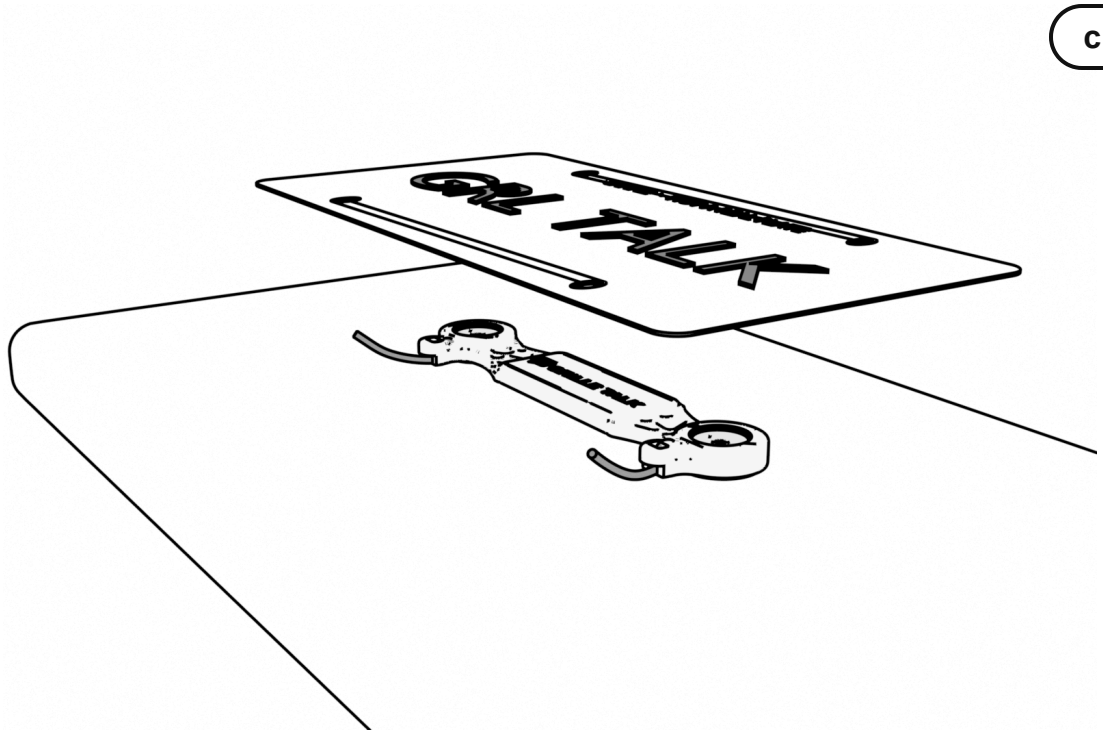

Snap the plate on. To remove: pull straight out, never slide.

✓

done



Keep both tethers clipped whenever you drive.